

Product Improvement Centre
EM0480 Recalibration Guide

Step 1

Ensure the coffee grinder is switched off and unplugged from the power outlet. Remove the bean hopper from the motor base, push down and turn anti-clockwise, see figure 1.



Figure 1

Step 2

To remove the top burr turn the grind adjustment collar in an anti-clockwise direction until it stops, see figure 2.

Note: The top burr can only be removed when graphic arrow on the grind adjustment collar is aligned with the arrow on the motor base.

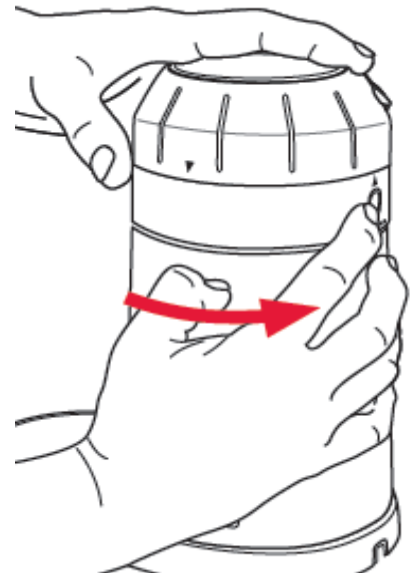


Figure 2

Step 3

Press and hold down the “UNLOCK” button at the rear of the motor base and with the other hand turn the grind adjustment collar anti-clockwise until the graphic arrow on the collar is aligned with the arrow on the motor base, see figure 3.

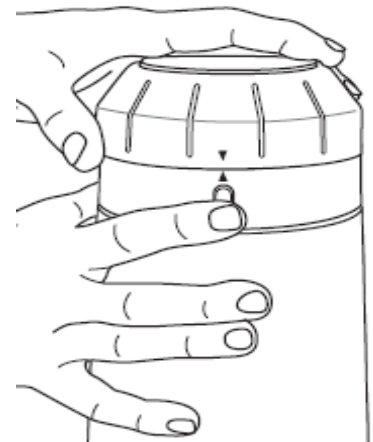


Figure 3

Product Improvement Centre
EM0480 Recalibration Guide

Step 4

Lift out the top burr from the grind adjustment collar using the handle, see figure 4.

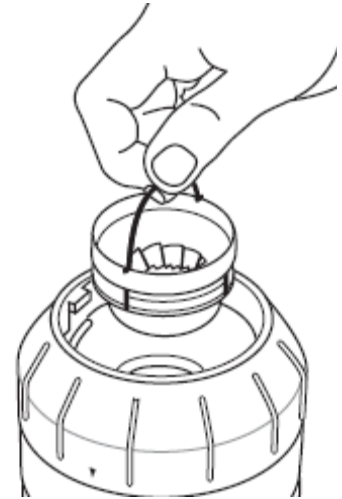


Figure 4

Step 5

Lift the grind adjustment collar away from the motor base.


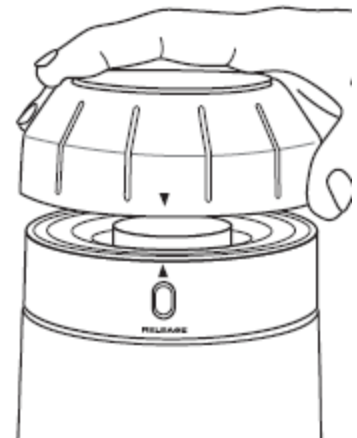


Figure 5

Step 6

Using a 10mm spanner or socket, unscrew the cap nut in a clockwise direction.


Tip: To hold the bottom burr in place while unscrewing the cap nut, insert a screw driver into the unit and press it against the burr.

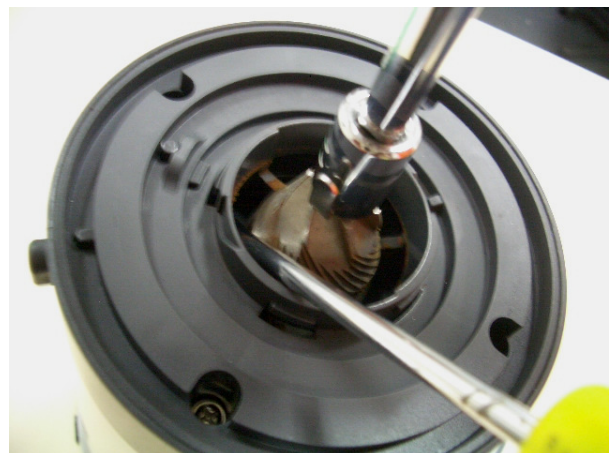

Product Improvement Centre
EM0480 Recalibration Guide

Step 7


Remove the star washer, burr blade and the lower burr.

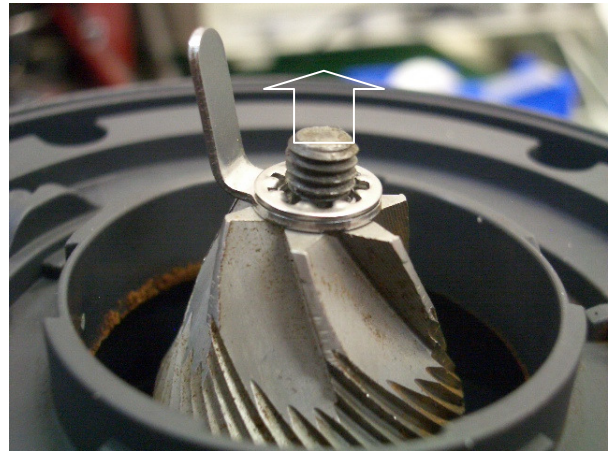

Step 8

Add a spacer to make the grind finer or remove a spacer to make the grind coarser.

Note: One spacer is approximately equivalent to 7 graduations on the grind adjustment collar.

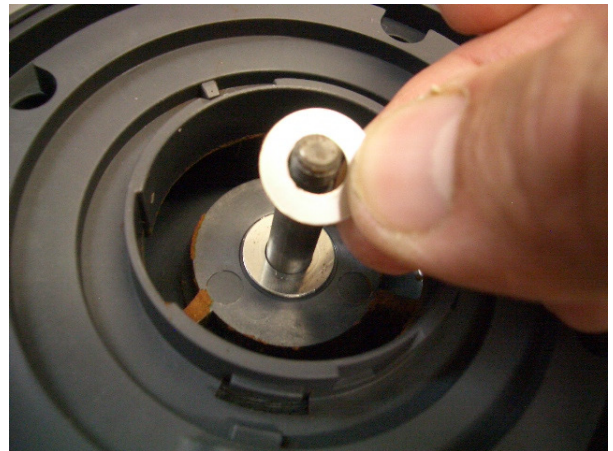

For assembly repeat the above steps in reverse order.

Caution: During assembly and before securing the lower burr, ensure the burr location hole is aligned with the burr location pin.

